



4-15. INPUT/OUTPUT PACK SCHEMATIC DIAGRAM

VIDEO MAIN SIGNAL PATH IN REC MODE
VIDEO MAIN SIGNAL PATH IN PLAYBACK MODE

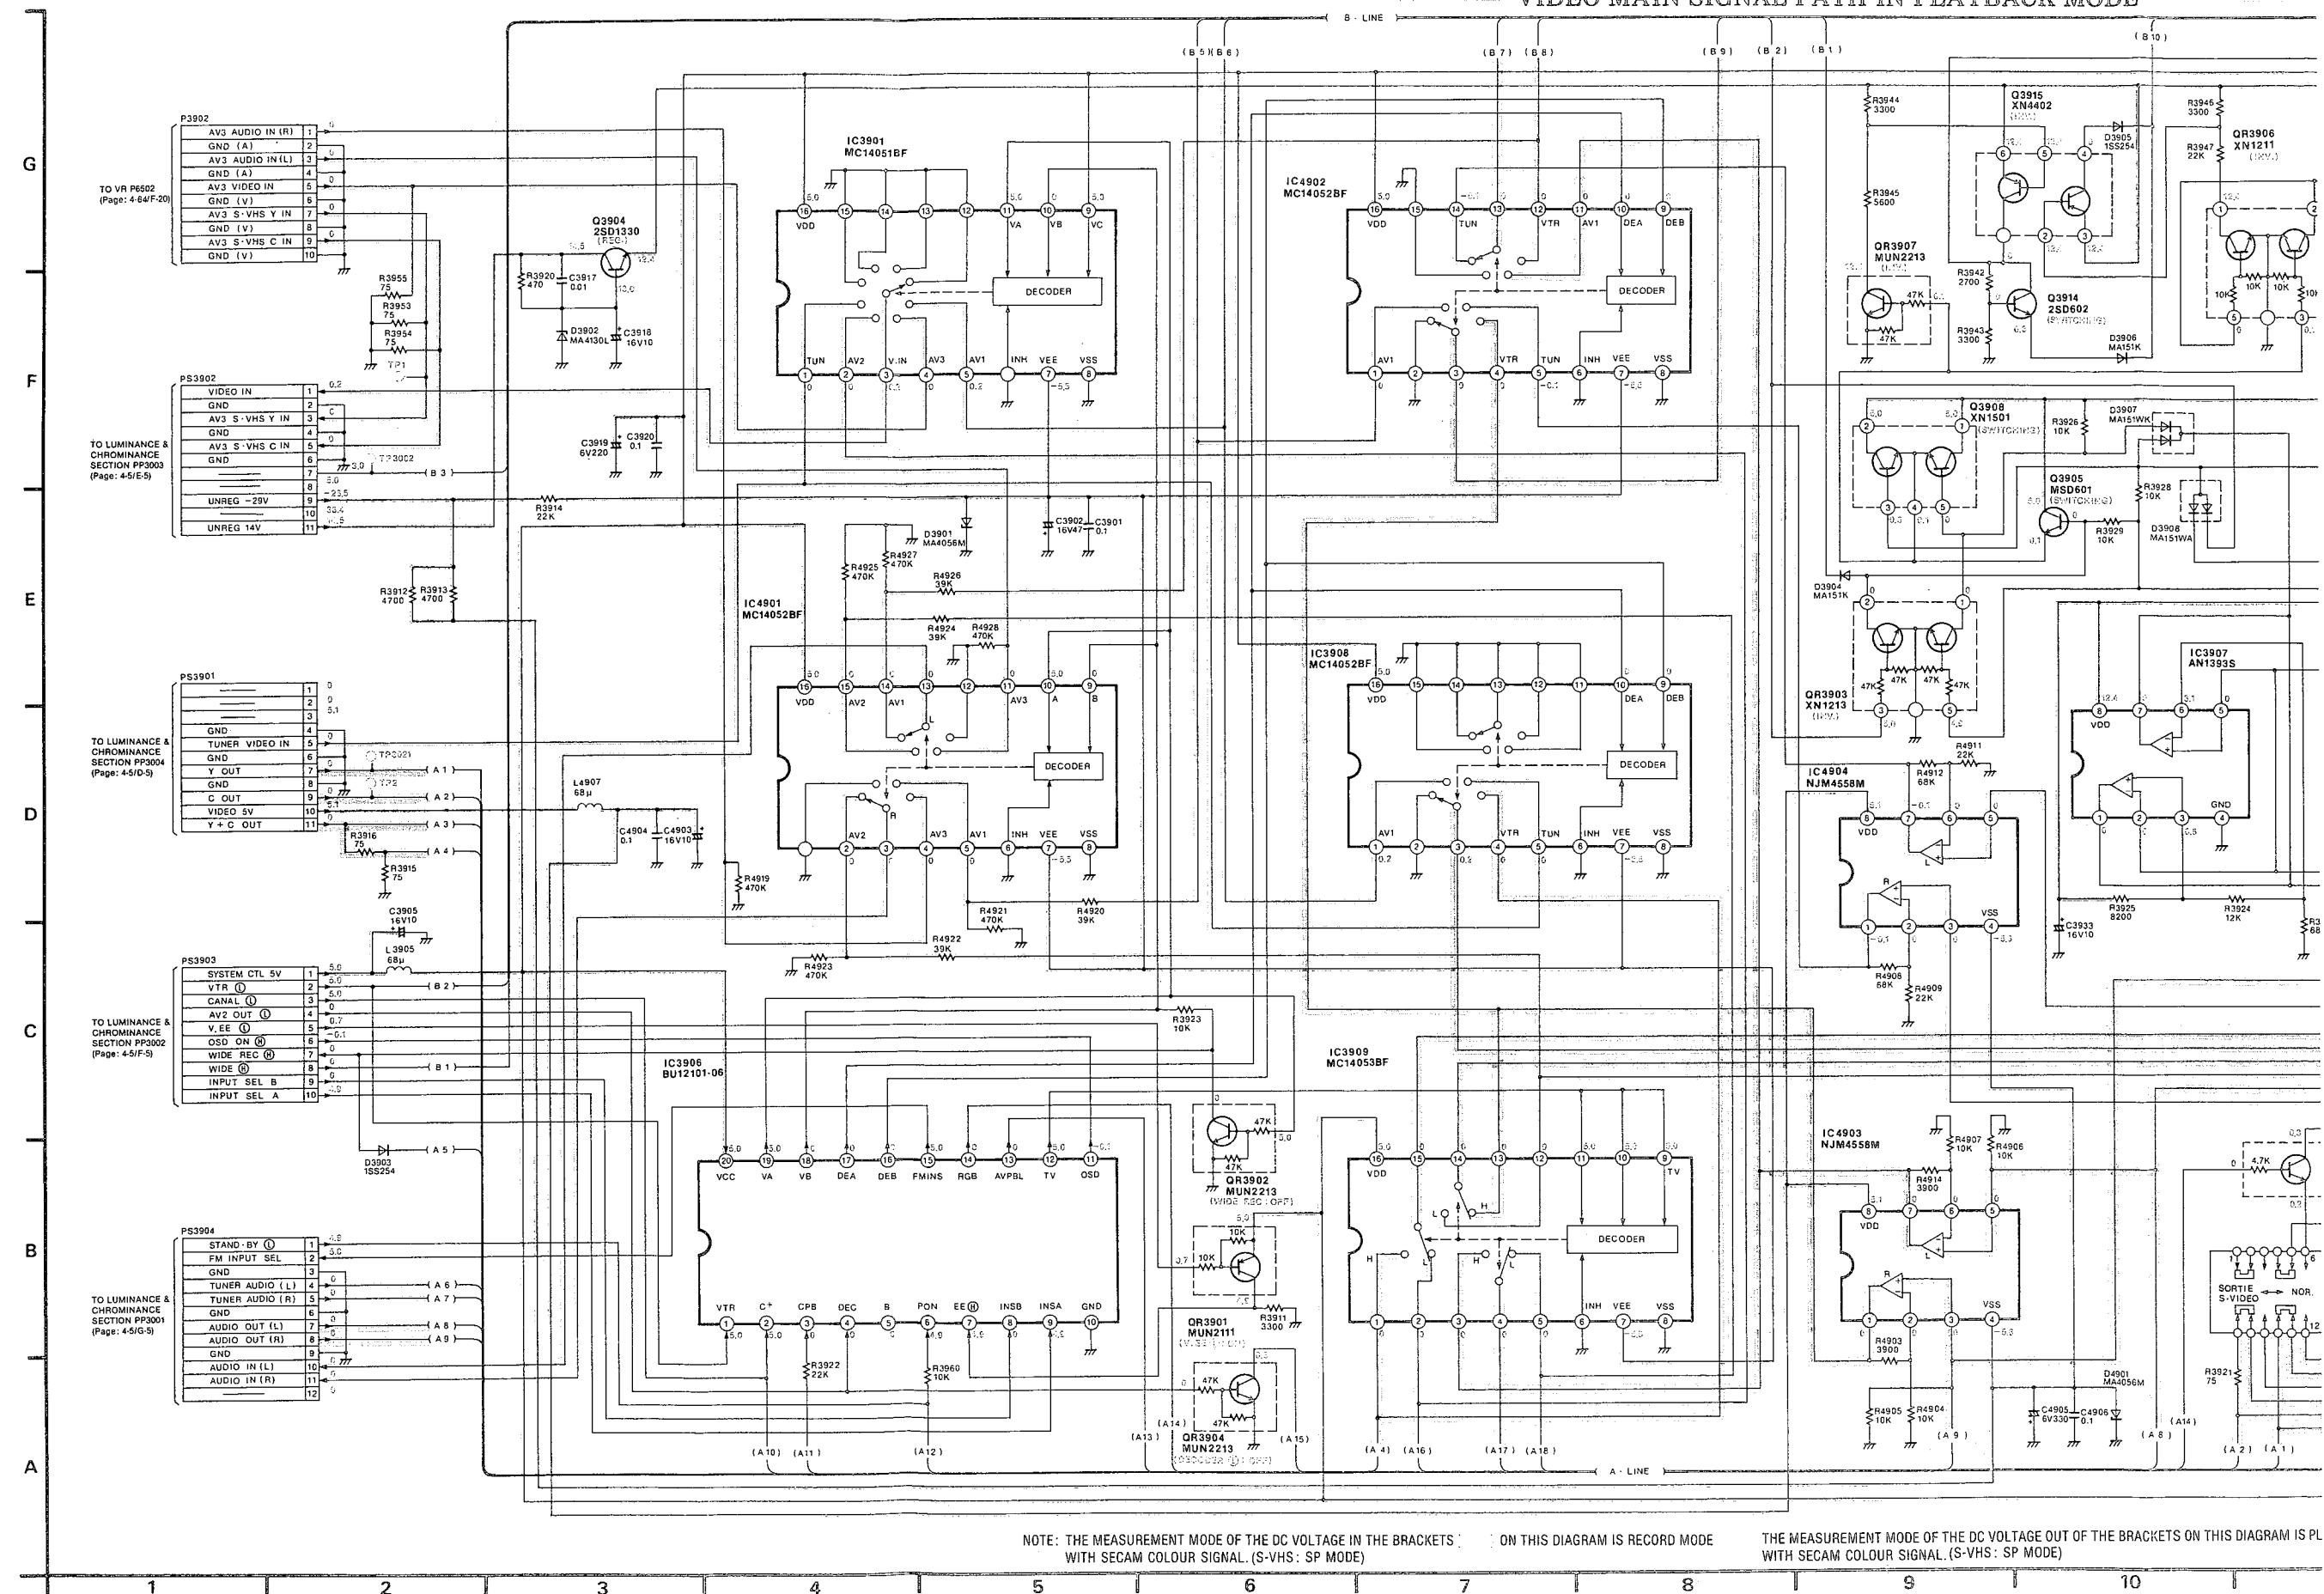

VIDEO MAIN SIGNAL PATH IN REC MODE
VIDEO MAIN SIGNAL PATH IN PLAYBACK MODE

AUDIO MAIN SIGNAL PATH IN REC MODE
AUDIO MAIN SIGNAL PATH IN PLAYBACK MODE

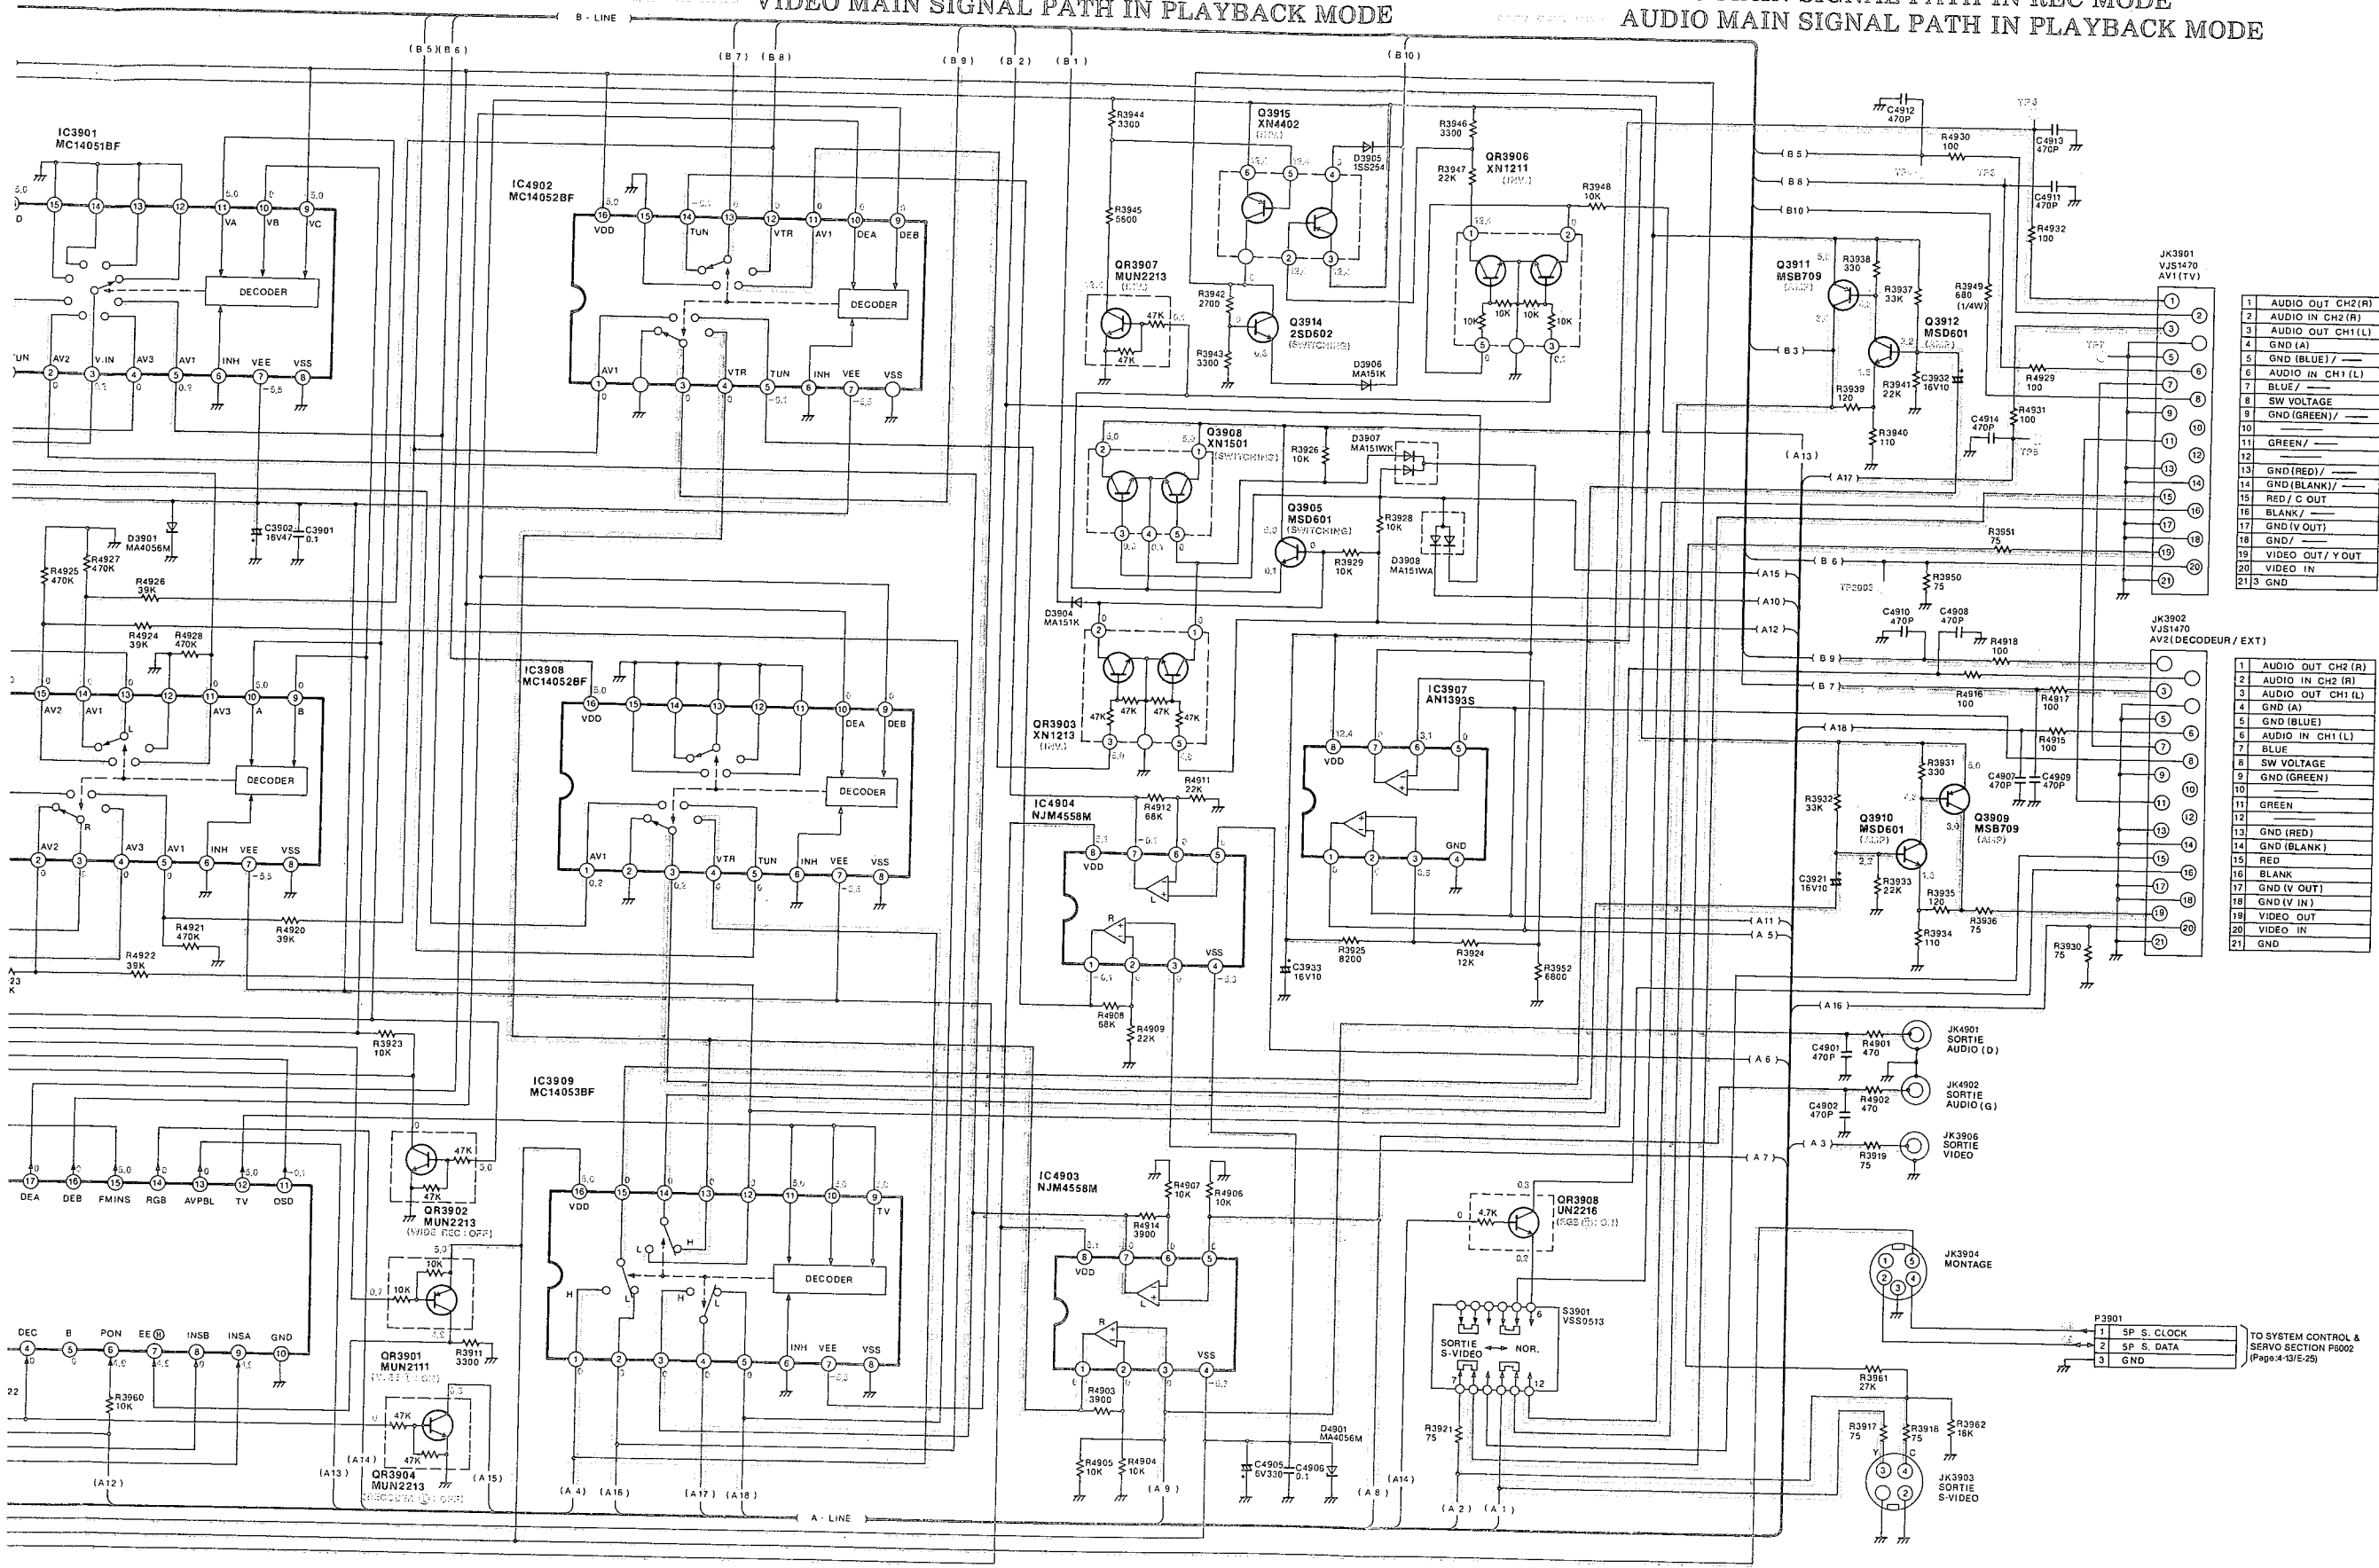

1	AUDIO OUT CH2 (R)
2	AUDIO IN CH2 (R)
3	AUDIO OUT CH1 (L)
4	GND (A)
5	GND (BLUE) /
6	AUDIO IN CH1 (L)
7	BLUE /
8	SW VOLTAGE
9	GND (GREEN) /
10	
11	GREEN /
12	
13	GND (RED) /
14	GND (BLANK) /
15	RED / C OUT
16	BLANK /
17	GND (V OUT)
18	GND /
19	VIDEO OUT / Y OUT
20	VIDEO IN
21	GND

1	AUDIO OUT CH2 (R)
2	AUDIO IN CH2 (R)
3	AUDIO OUT CH1 (L)
4	GND (A)
5	GND (BLUE)
6	AUDIO IN CH1 (L)
7	BLUE
8	SW VOLTAGE
9	GND (GREEN)
10	
11	GREEN
12	
13	GND (RED)
14	GND (BLANK)
15	RED
16	BLANK
17	GND (V OUT)
18	GND (V IN)
19	VIDEO OUT
20	VIDEO IN
21	GND

NOTE: THE MEASUREMENT MODE OF THE DC VOLTAGE IN THE BRACKETS ON THIS DIAGRAM IS RECORD MODE WITH SECAM COLOUR SIGNAL. (S-VHS: SP MODE)

THE MEASUREMENT MODE OF THE DC VOLTAGE OUT OF THE BRACKETS ON THIS DIAGRAM IS PLAYBACK MODE WITH SECAM COLOUR SIGNAL. (S-VHS: SP MODE)

NOTE: DO NOT USE ANY PART NUMBER SHOWN ON THIS SCHEMATIC DIAGRAM FOR ORDERING. WHEN YOU ORDER A PART, PLEASE REFER TO PARTS LIST.