




AIWA HV-CX212 SCHEMATIC DIAGRAM – 1 (VIDEO)

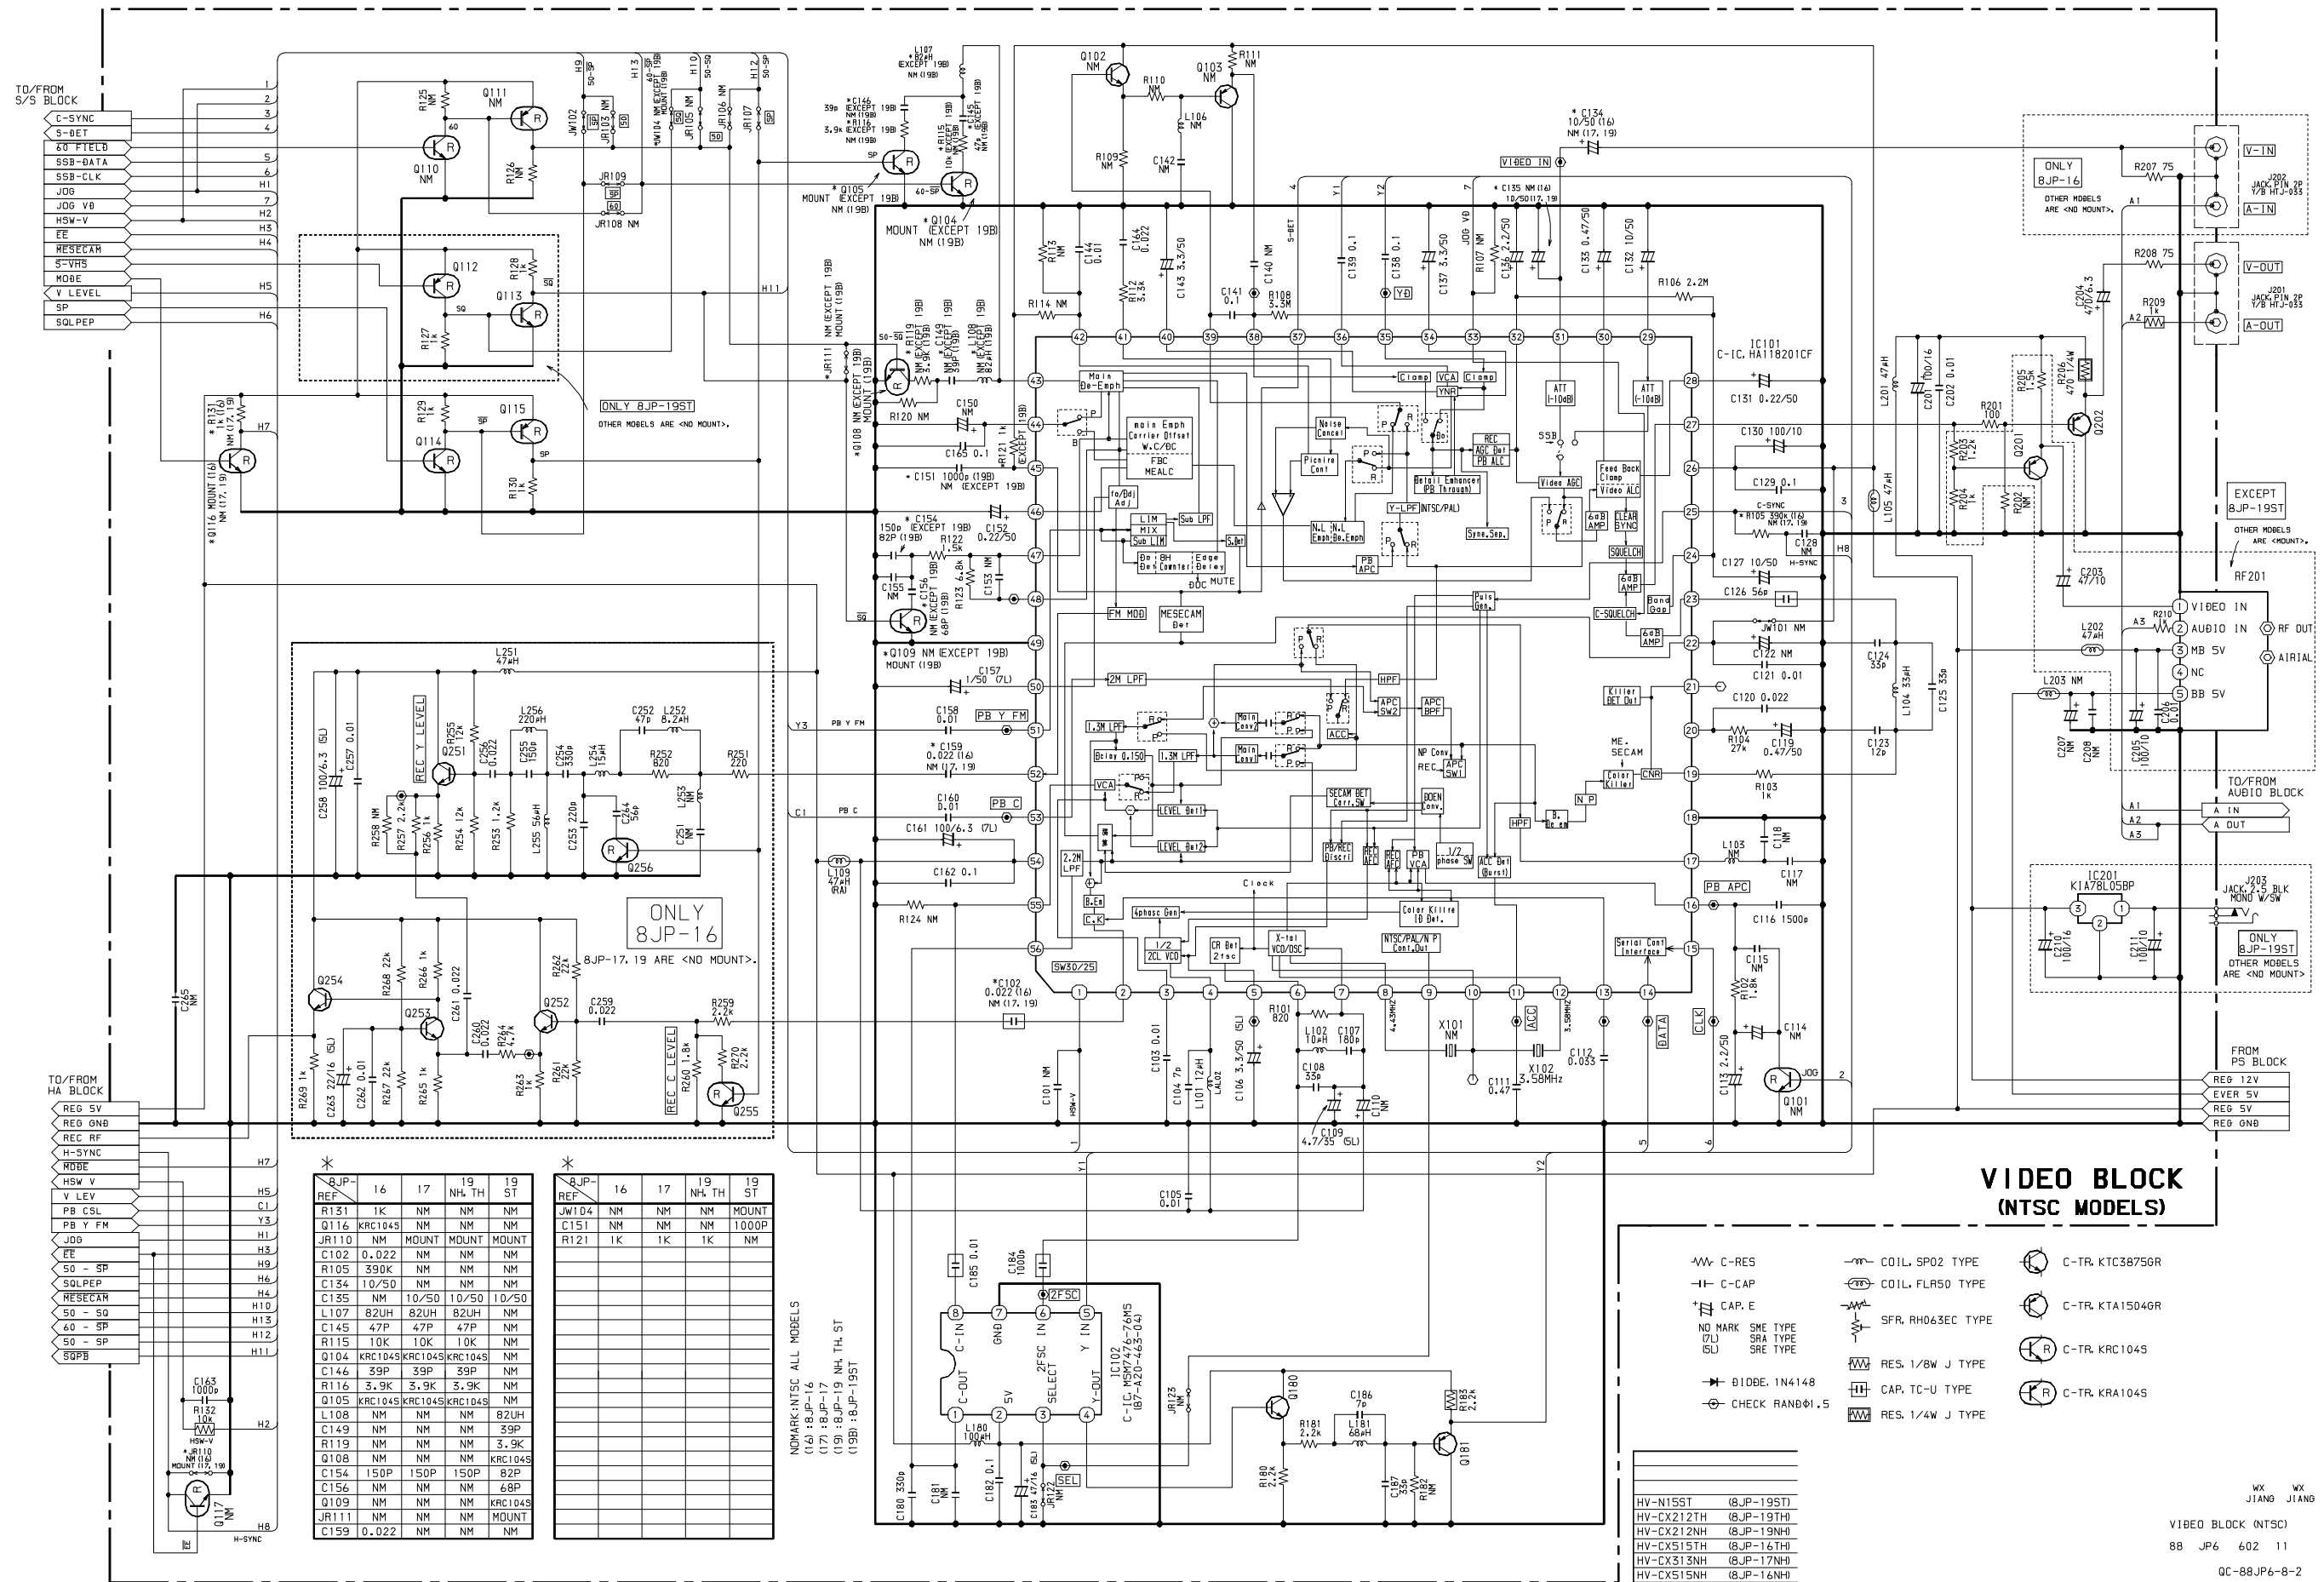


SCHEMATIC DIAGRAM – 2 (AUDIO)

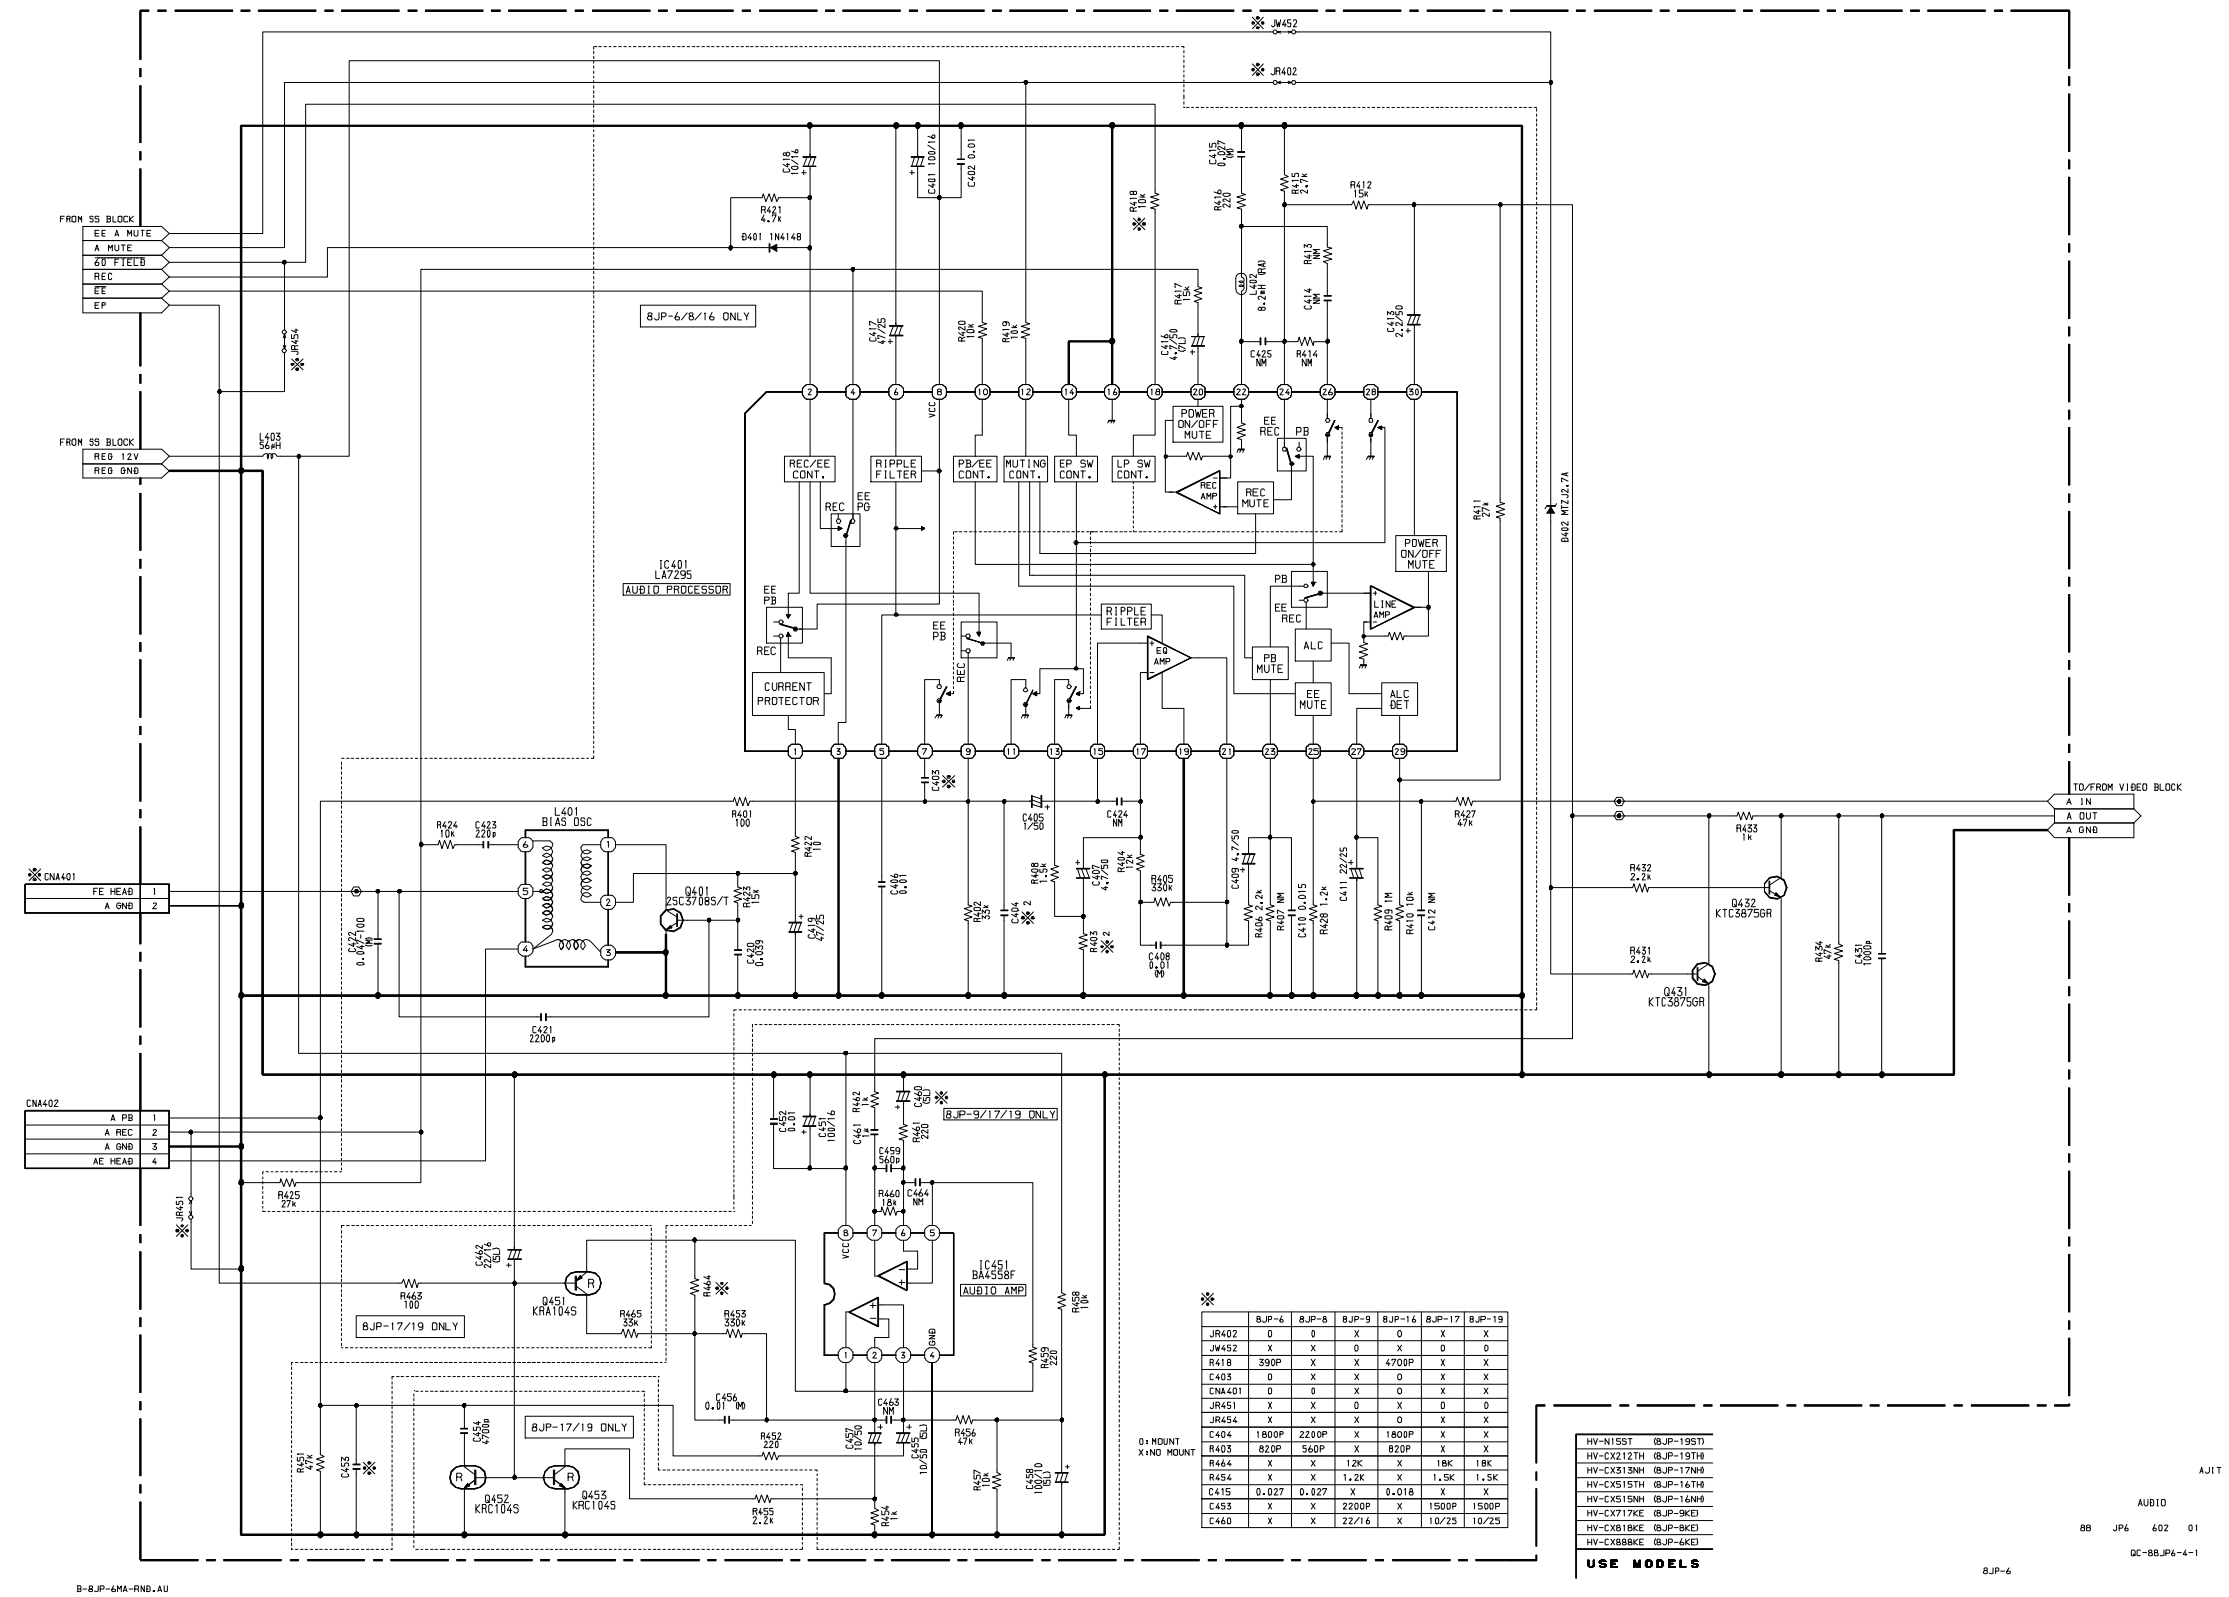

SCHEMATIC DIAGRAM – 3 (FRONT)

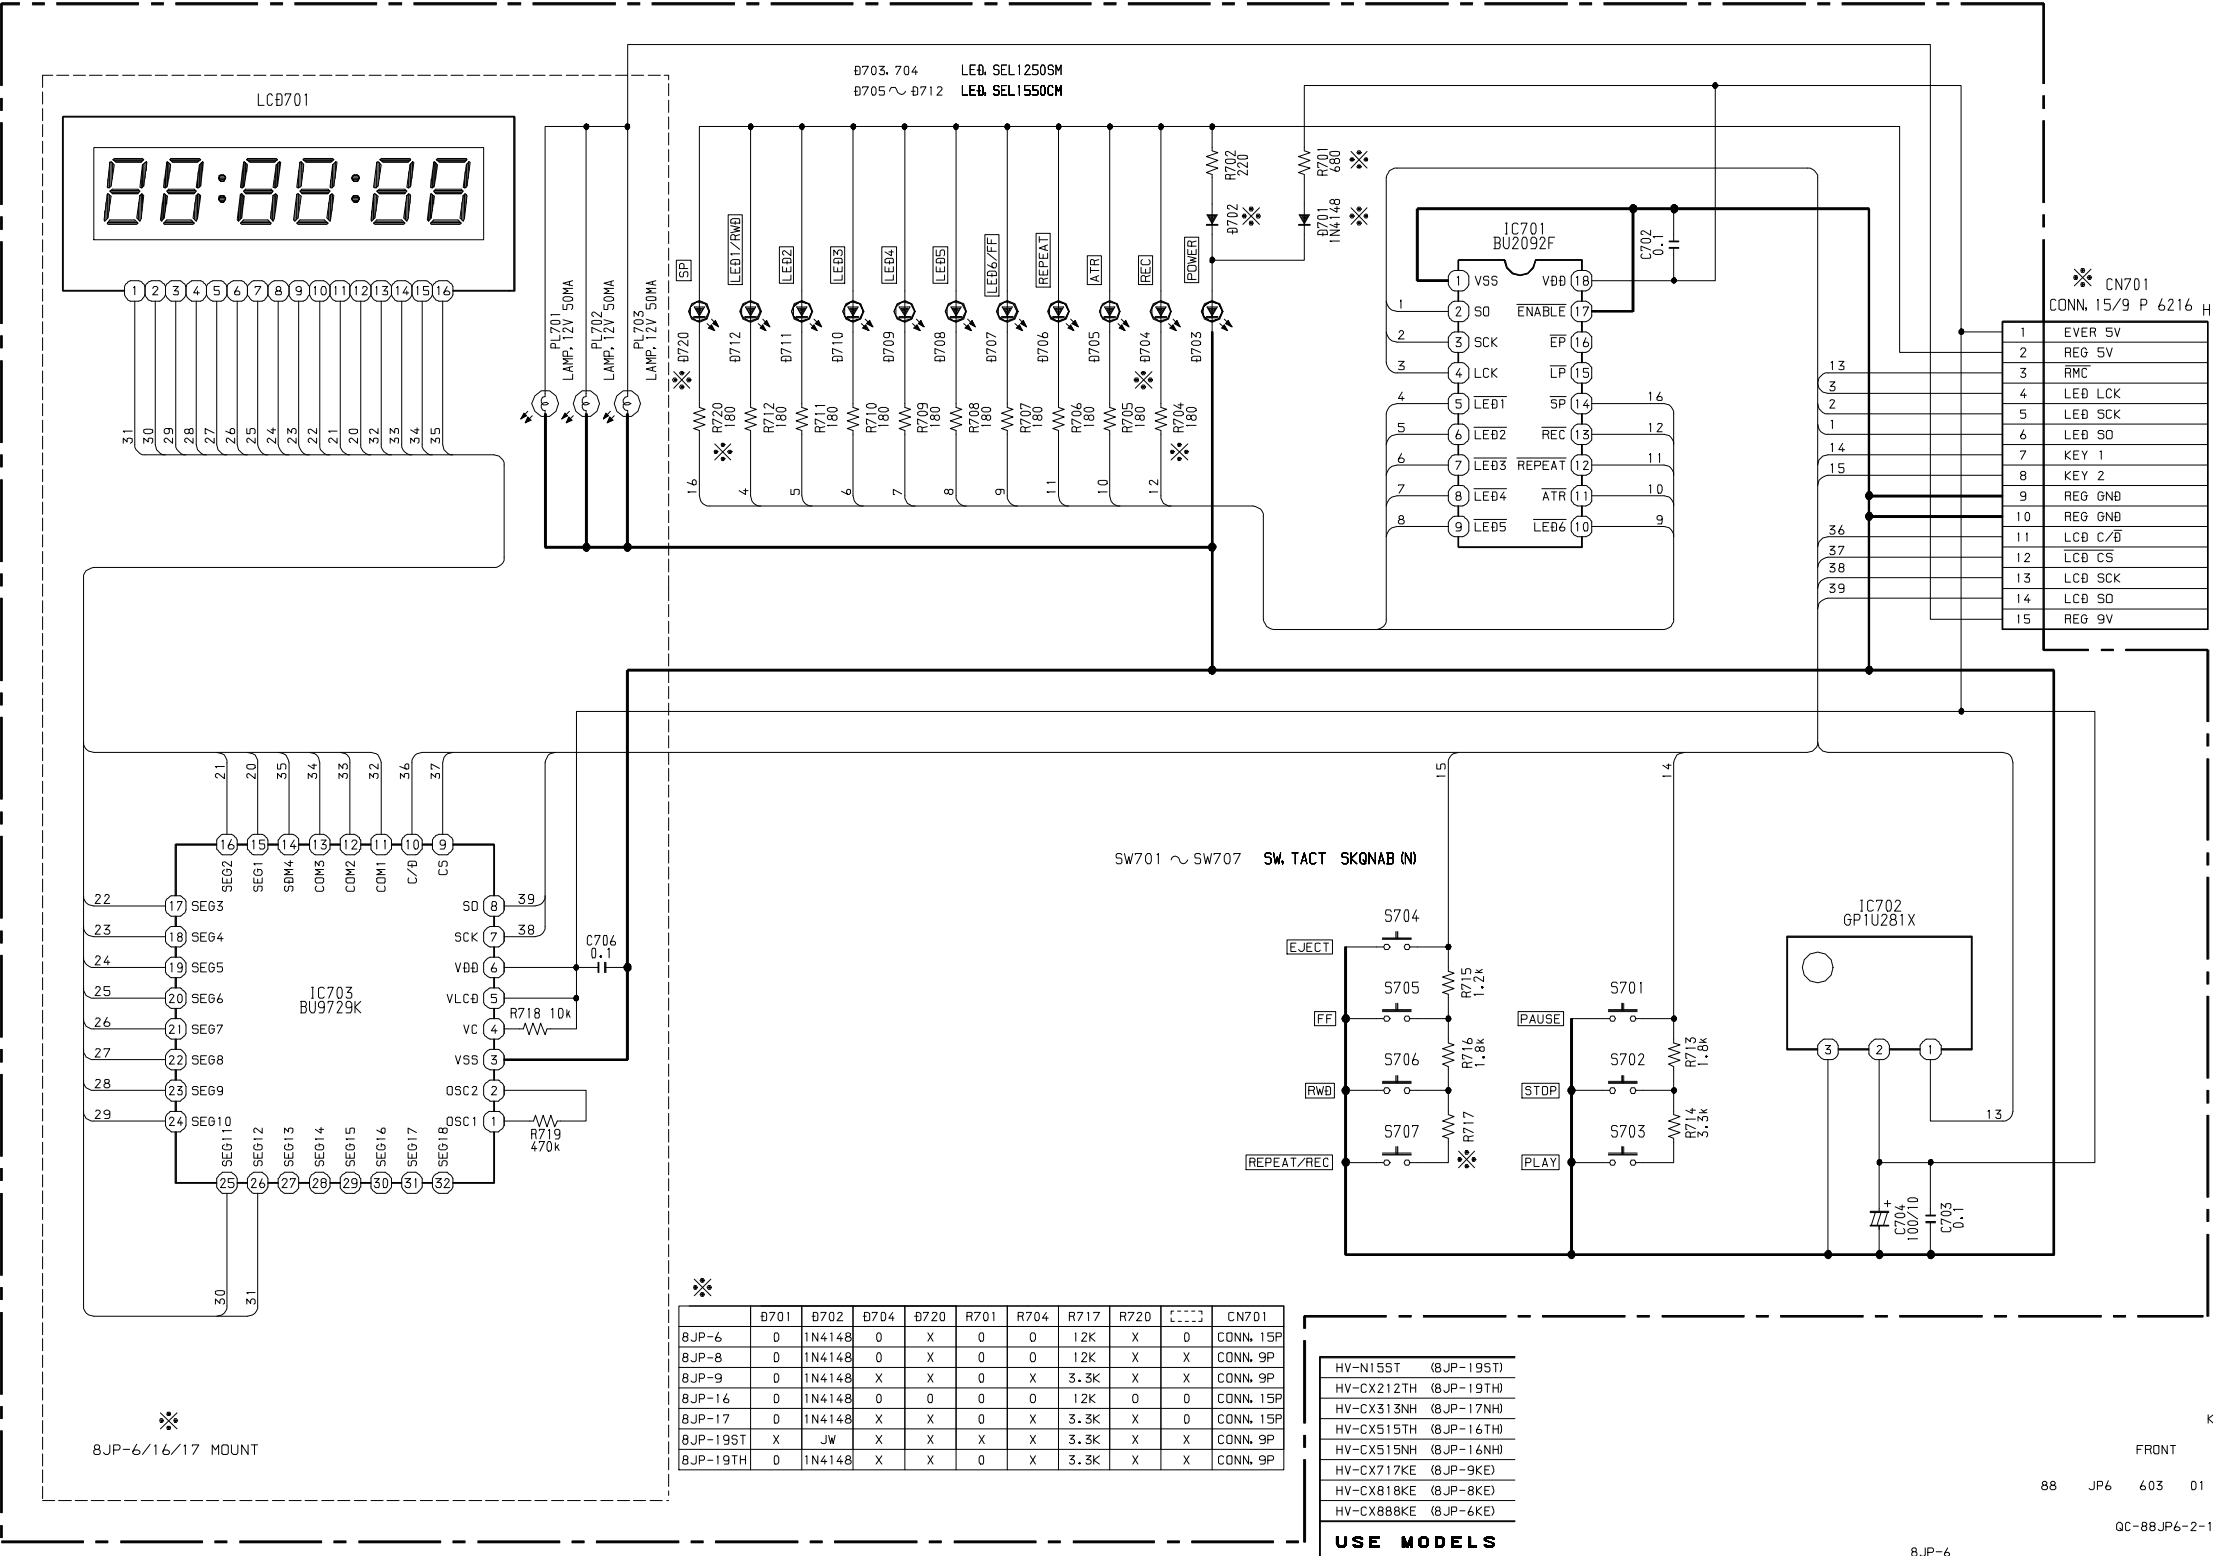

SCHEMATIC DIAGRAM – 4 (HEAD AMP)

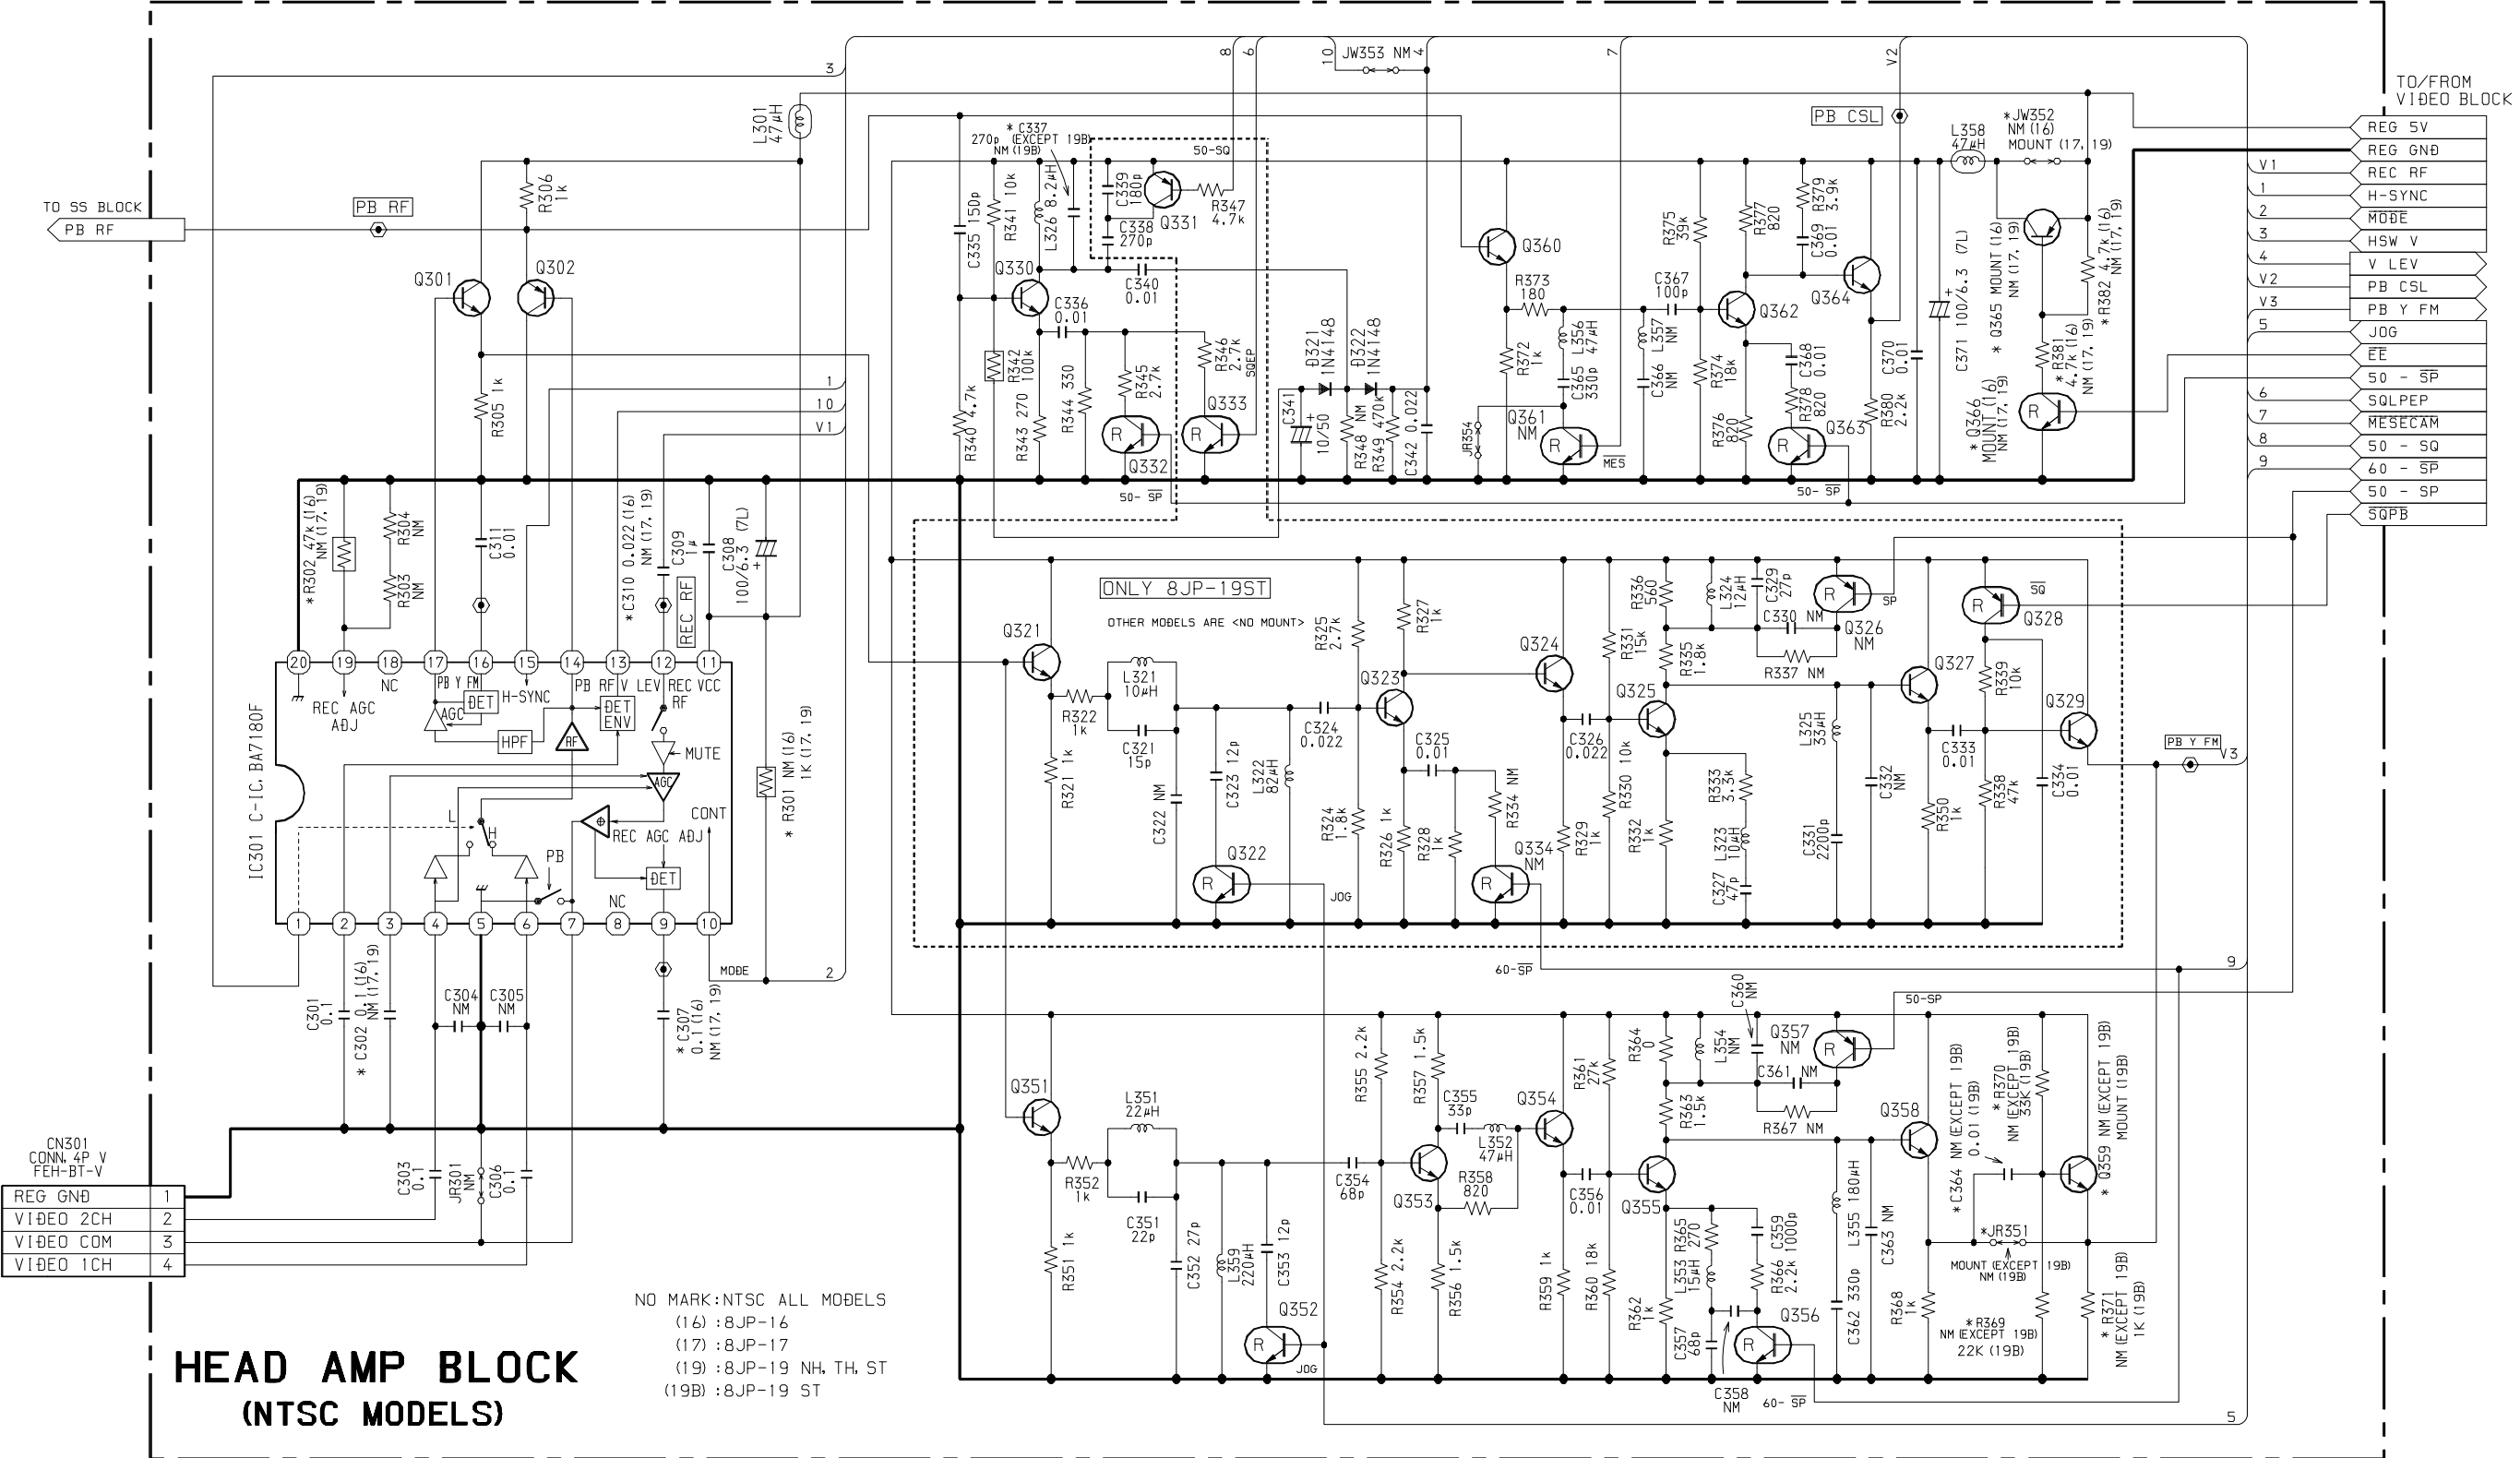

HEAD AMP BLOCK
(NTSC MODELS)

NO MARK:NTSC ALL MODELS
(16) : 8JP-16
(17) : 8JP-17
(19) : 8JP-19 NH, TH, ST
(19B) : 8JP-19 ST

- C-TR, KTC3875GR
- C-TR, KTA1504GR
- C-TR, KRC104S
- C-TR, KRA104S

- C-RES, C-CAP.
- RES. 1/8W (AX)
- CAP. TC-U (AX)
- COIL, FLR50
- COIL, SP02
- CAP. E
- NO MARK:SME (7L) :SRA (5L) :SRE
- CHECK LAND #1.5

	8JP-16	8JP-17	8JP-19 NH, TH	8JP-19 ST		8JP-16	8JP-17	8JP-19 NH, TH	8JP-19 ST
C302	0.1	NM	NM	NM	R381	4.7K	NM	NM	NM
C307	0.1	NM	NM	NM	R382	4.7K	NM	NM	NM
R301	NM	1K (AX)	1K (AX)	1K (AX)	R369	NM	NM	NM	22K
C310	0.022	NM	NM	NM	R370	NM	NM	NM	33K
R302	39K	NM	NM	NM	R371	NM	NM	NM	1K
C337	270P	270P	270P	NM	C364	NM	NM	NM	0.01
JW352	NM	MOUNT	MOUNT	MOUNT	JR351	MOUNT	MOUNT	MOUNT	NM
Q365	MOUNT	NM	NM	NM	Q359	NM	NM	NM	MOUNT
Q366	MOUNT	NM	NM	NM					


HV-N15ST	(8JP-19ST)
HV-CX212TH	(8JP-19TH)
HV-CX212NH	(8JP-19NH)
HV-CX515TH	(8JP-16TH)
HV-CX313NH	(8JP-17NH)
HV-CX515NH	(8JP-16NH)

USE MODELS

B-8JP-6MA-RND, HANT

WX
JIANG
VIDEO HA BLOCK (NTSC)
88 JP6 602 11
QC-8JP6-7-2

SCHEMATIC DIAGRAM – 5 (SYSCON/SERVO)

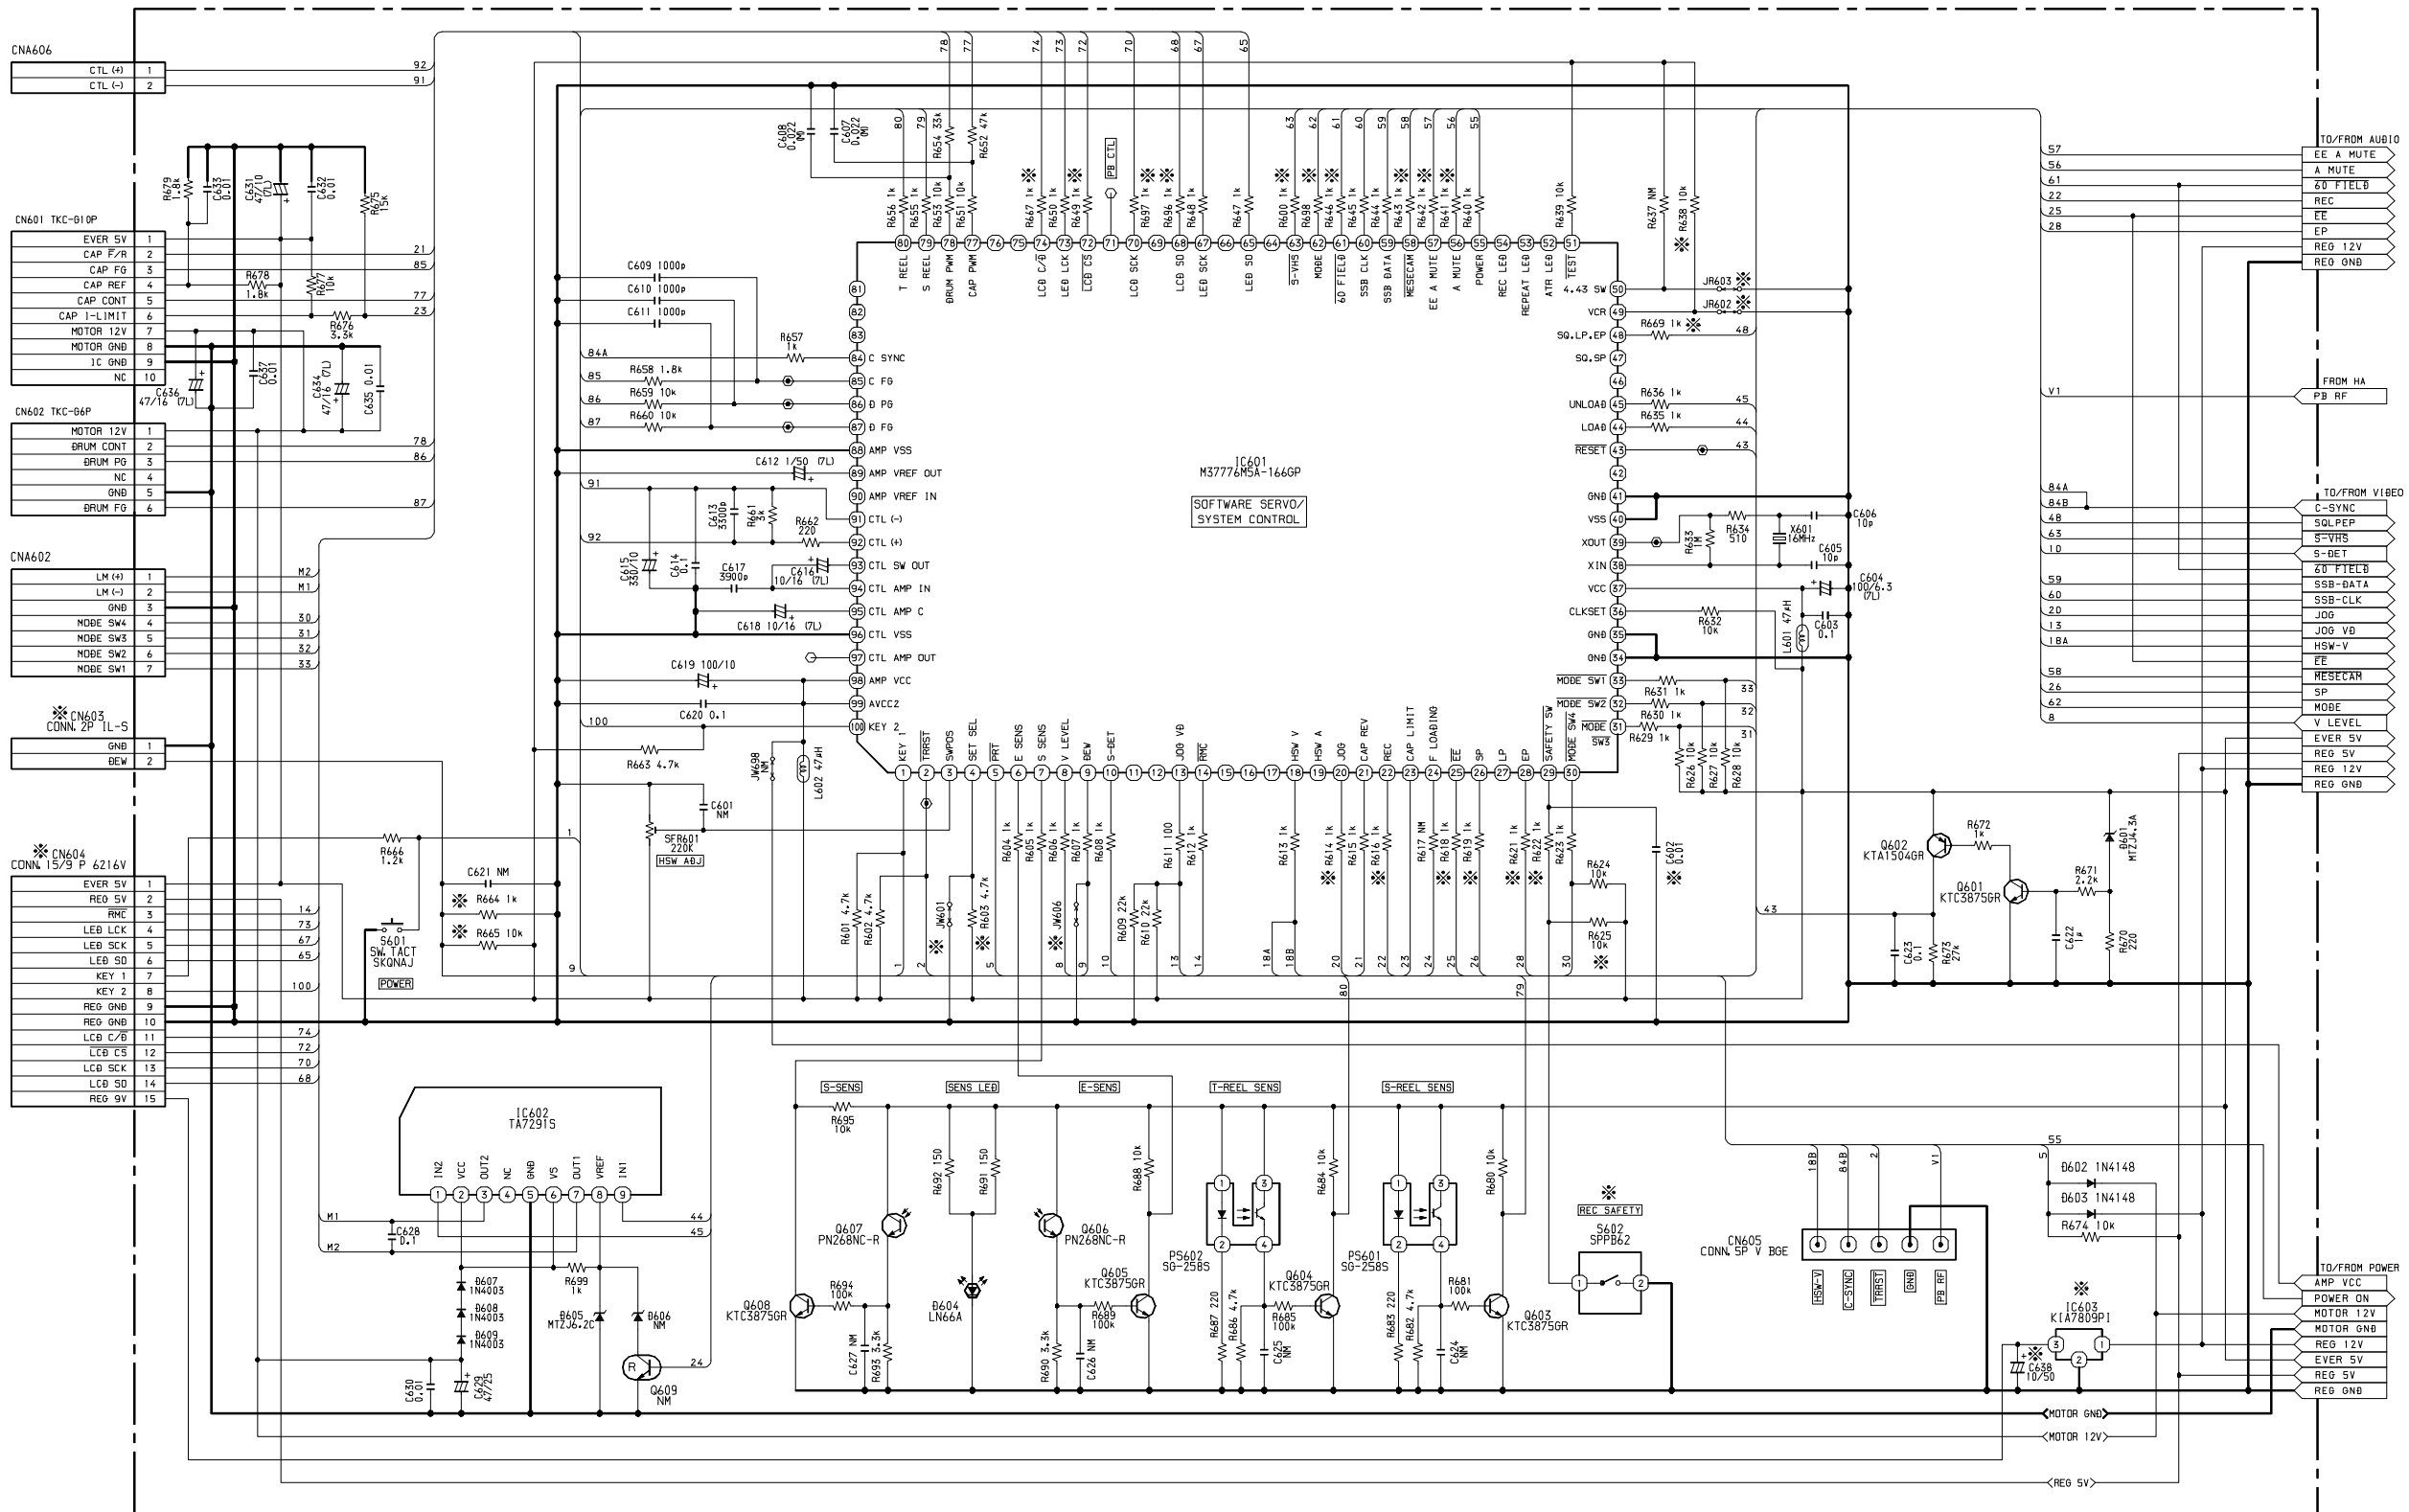

✖	CN603	CN604	C602	CA58	IC603	JW601	JW606	JR602	JR603	R600	R603	R616	R619	R621	R622	R625	R638	R641	R642	R643	R646	R649	R664	R665	R667	R669	R696	R697	R698	R614	R618	S602
BJP-6	X	CONN.1SP	O	O	O	O	O	X	O	X	X	O	X	X	O	O	O	O	X	O	O	O	X	X	X	X	O	O	O	X	O	O
BJP-8	X	CONN.9P	O	X	X	O	O	X	O	X	X	O	X	X	O	O	O	O	O	X	O	X	X	X	X	X	X	X	X	O	X	O
BJP-9	X	CONN.9P	X	X	X	O	O	O	O	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X
BJP-16	X	CONN.1SP	O	O	O	X	O	O	X	X	X	O	O	O	O	O	O	O	O	X	X	X	X	X	X	X	X	X	O	O	O	O
BJP-17	X	CONN.1SP	X	O	O	X	O	O	X	X	O	X	O	O	X	X	X	X	X	O	X	X	X	X	X	X	X	X	O	O	X	X
BJP-19 ST	O	CONN.9P	X	X	X	X	X	O	X	O	O	O	O	O	O	X	X	X	X	X	X	O	O	X	X	O	X	X	X	X	O	X
BJP-19 TH	X	CONN.9P	X	X	X	X	O	O	X	X	O	O	O	O	O	X	X	X	X	O	X	X	X	X	X	O	X	X	X	O	X	X
O MOUNT																																
X NO MOUNT																																

B-BJP-6MA-RND,SS

HV-N155T	(BJP-195T)
HV-CX212TH	(BJP-19TH)
HV-CX313NH	(BJP-17NH)
HV-CX515TH	(BJP-16TH)
HV-CX515NH	(BJP-16NH)
HV-CX717KE	(BJP-9KE)
HV-CX818KE	(BJP-8KE)
HV-CX888KE	(BJP-6KE)

USE MODELS


SYSCON SERVO

88 JP6 602 01

QC-88JP6-1-1

BJP-6

SCHEMATIC DIAGRAM – 6 (POWER)

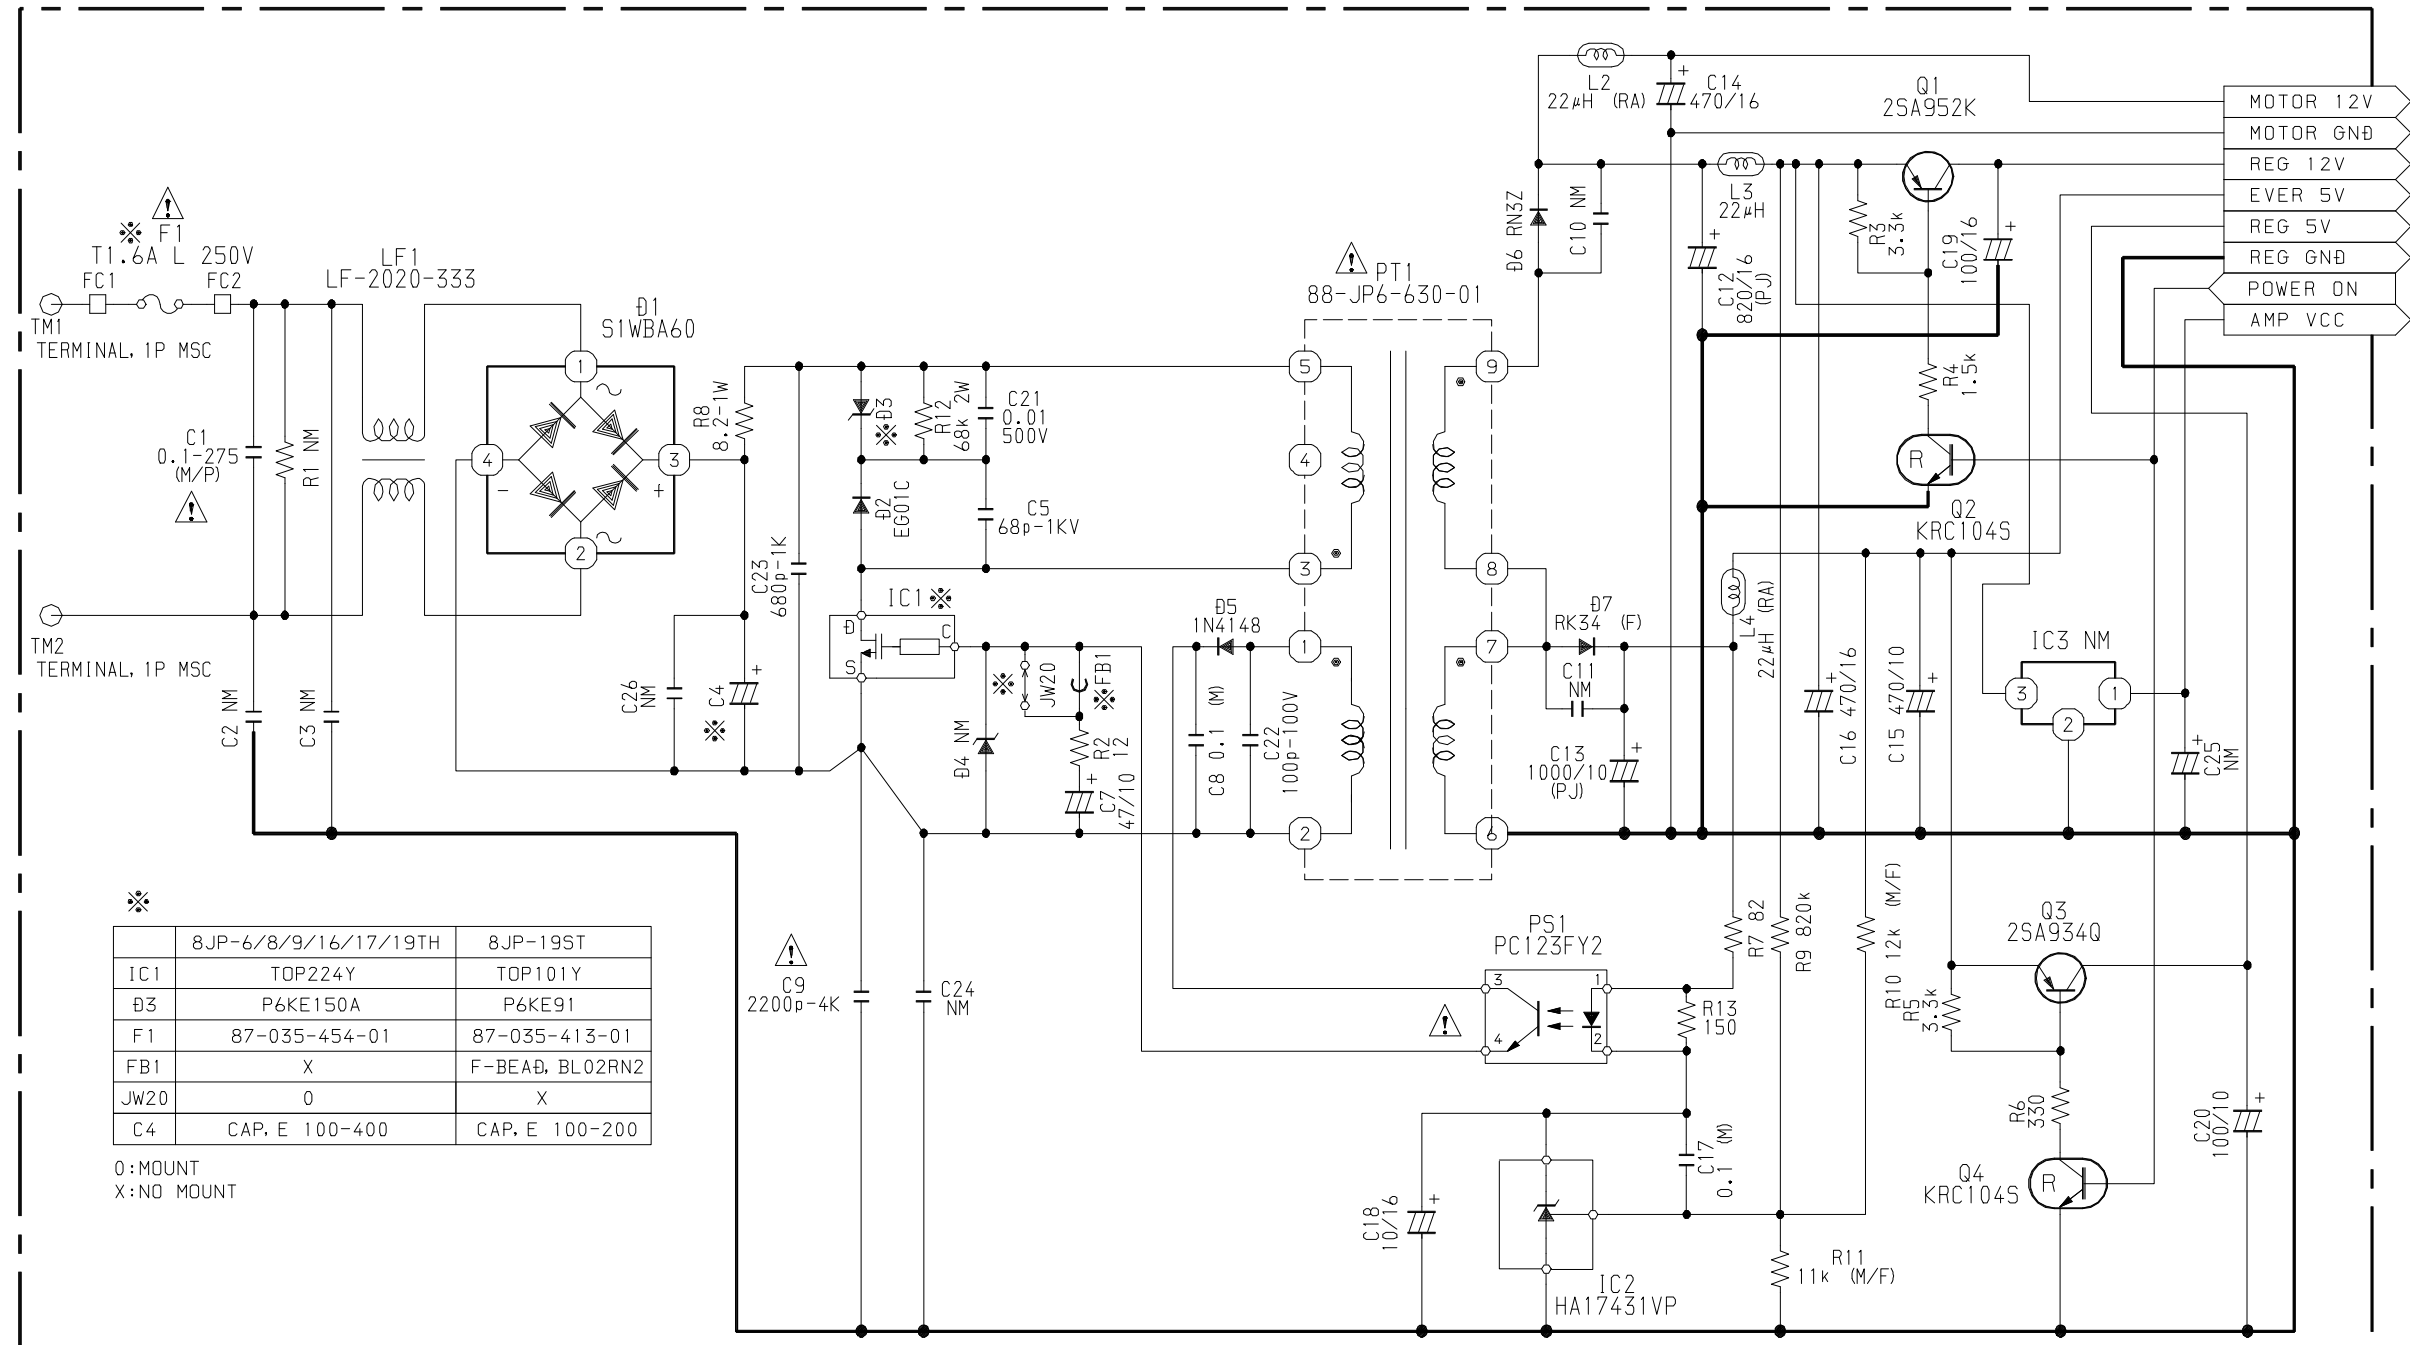

HV-N15ST	(8JP-19ST)
HV-CX212TH	(8JP-19TH)
HV-CX313NH	(8JP-17NH)
HV-CX515TH	(8JP-16TH)
HV-CX515NH	(8JP-16NH)
HV-CX717KE	(8JP-9KE)
HV-CX818KE	(8JP-8KE)
HV-CX888KE	(8JP-6KE)

USE MODELS

B-8JP-6MA-RND.PS

AJIT

POWER

88 JP6 602 11

QC-88JP6-3-2

8JP-6